


General Description

EXTERIOR/INTERIOR TRIM

1. General Description

A: COMPONENT

1. UNDER COVER

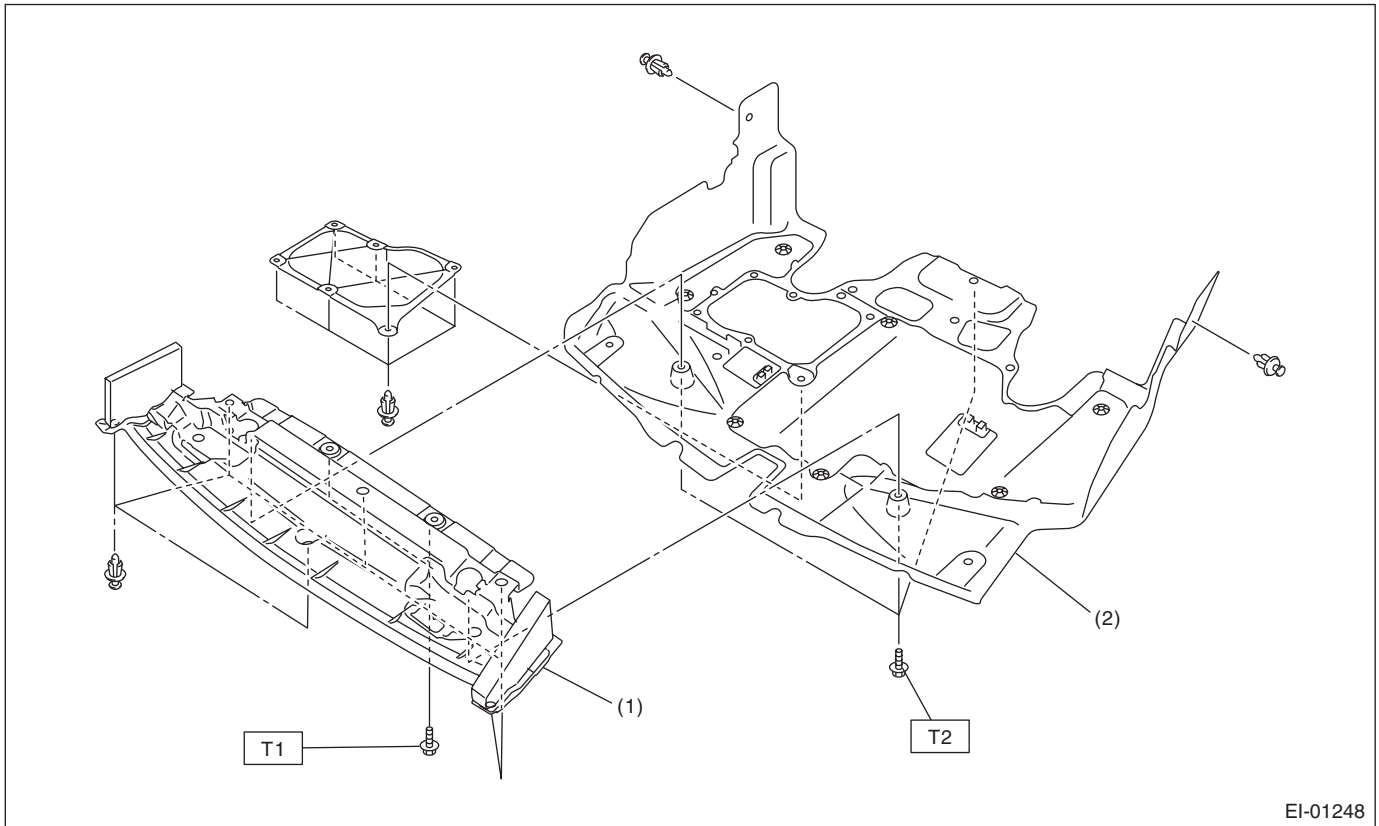

EI-01248

(1) Front lower cover


(2) Under cover

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.4)

T2: 17.5 (1.78, 12.7)

2. UNDER PROTECTOR

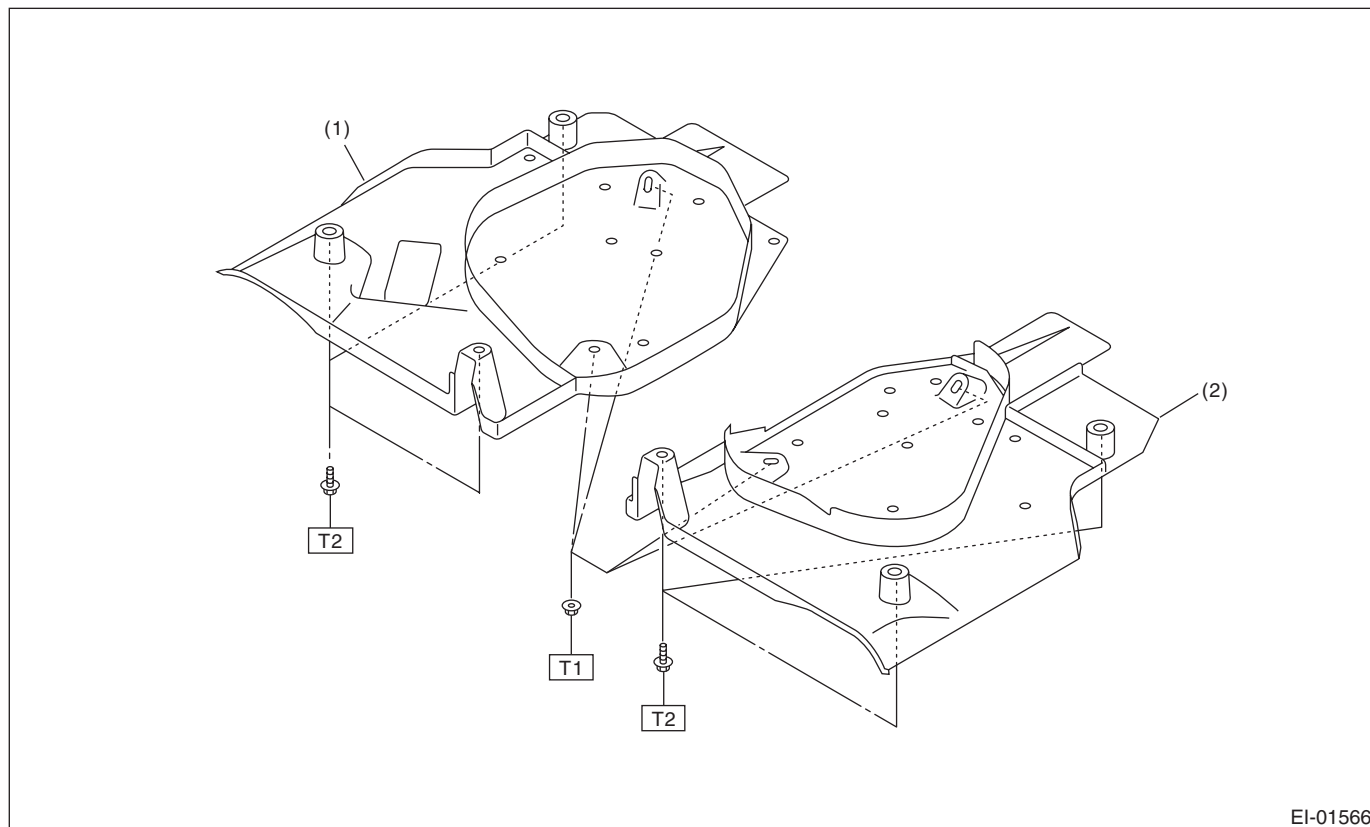

EI-01566

(1) Fuel tank protector RH

(2) Fuel tank protector LH


Tightening torque: N·m (kgf-m, ft-lb)

T1: 9.0 (0.92, 6.6)

T2: 17.5 (1.78, 12.9)

EXTERIOR/INTERIOR TRIM

3. FRONT BUMPER

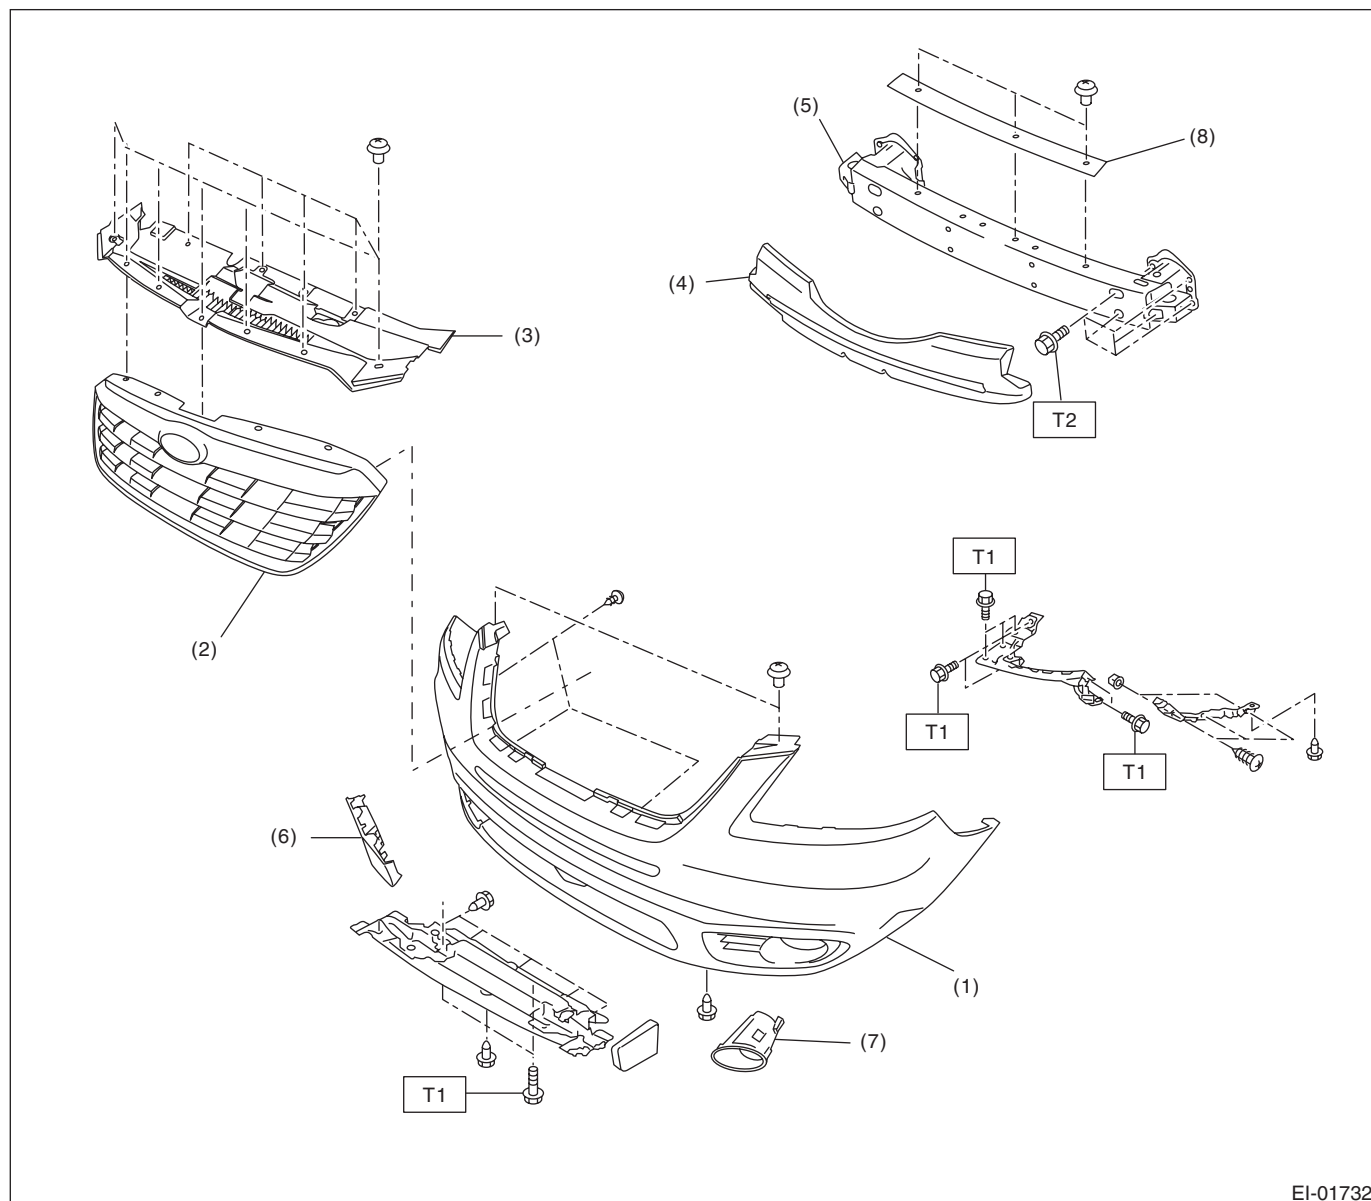

- | | |
|--------------------------|-------------------------------|
| (1) Bumper face | (5) Bumper beam reinforcement |
| (2) Front grille | (6) Towing hook cover |
| (3) Front upper cover | (7) Fog light ASSY |
| (4) Energy absorber foam | (8) Bumper beam cover |

- (2) Front grille
- (3) Front upper cover
- (4) Energy absorber foam

- (3) Front upper cover

- (4) Energy absorber foam

- (5) Bumper beam reinforcement

- (6) Towing hook cover

- (7) Fog light ASSY


- (8) Bumper beam cover

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.4)

T2: 33 (3.4, 24)

4. REAR BUMPER

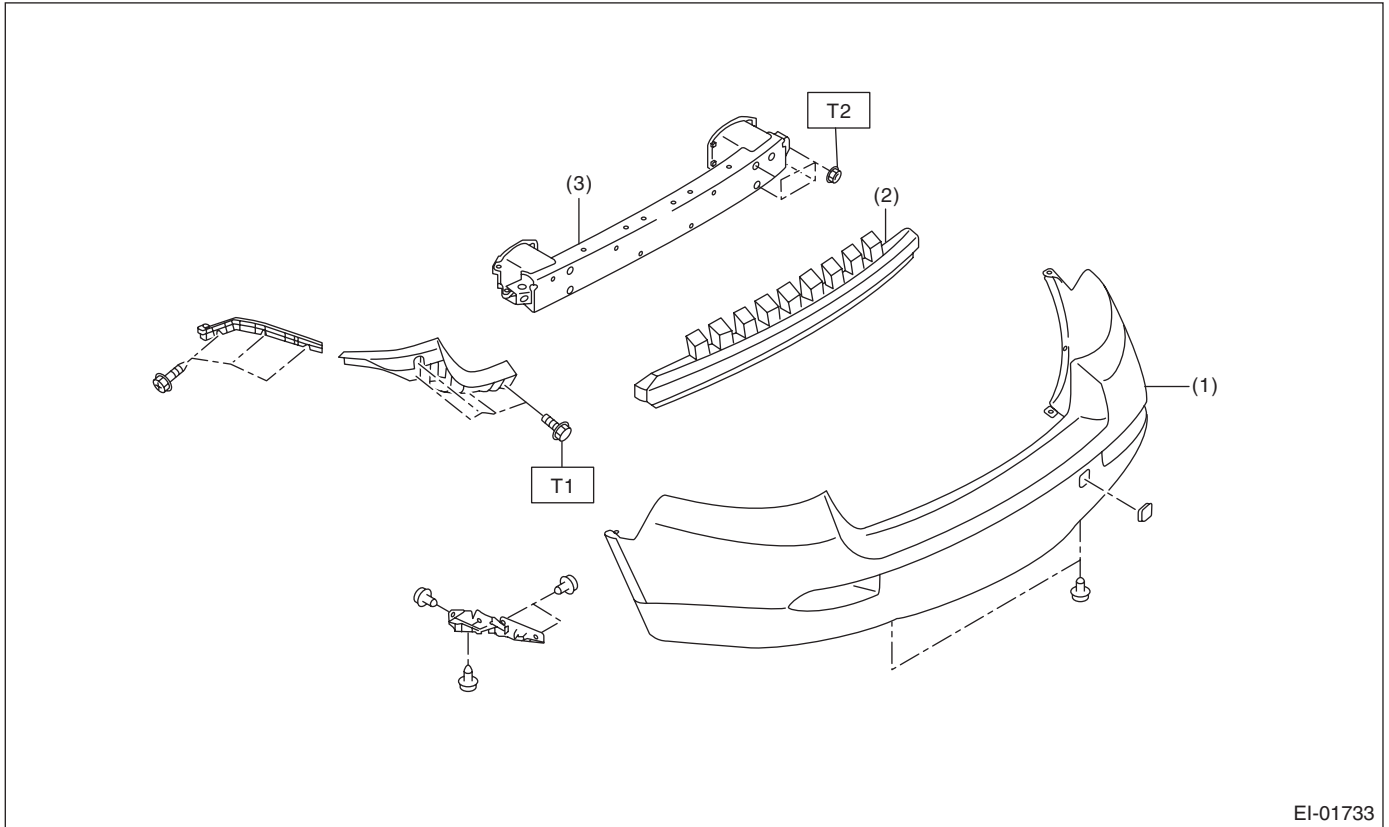

- (1) Bumper face
- (2) Energy absorber foam


- (3) Bumper beam reinforcement

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.4)

T2: 33 (3.4, 24)

5. MUD GUARD

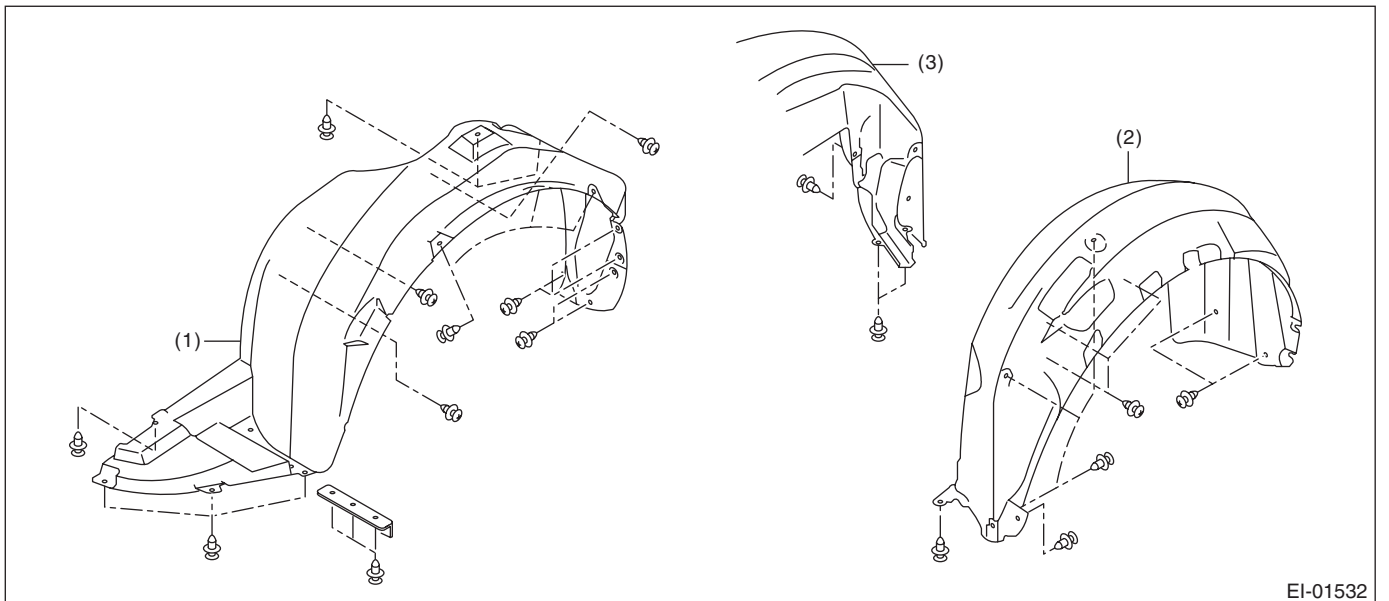

- (1) Front mud guard


- (2) Rear mud guard LH

- (3) Rear mud guard RH

General Description

EXTERIOR/INTERIOR TRIM

6. COWL PANEL

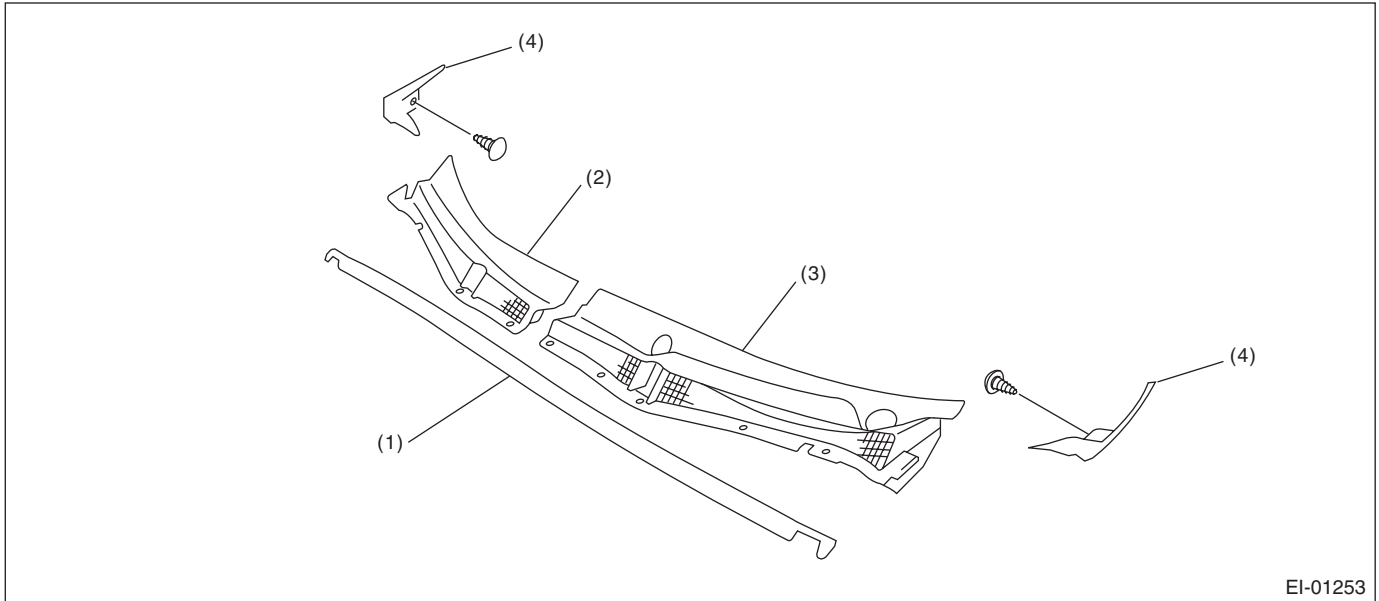


EI-01253

- (1) Weather strip
- (2) Cowl panel RH

(3) Cowl panel LH

(4) Cowl panel side

7. ROOF SPOILER

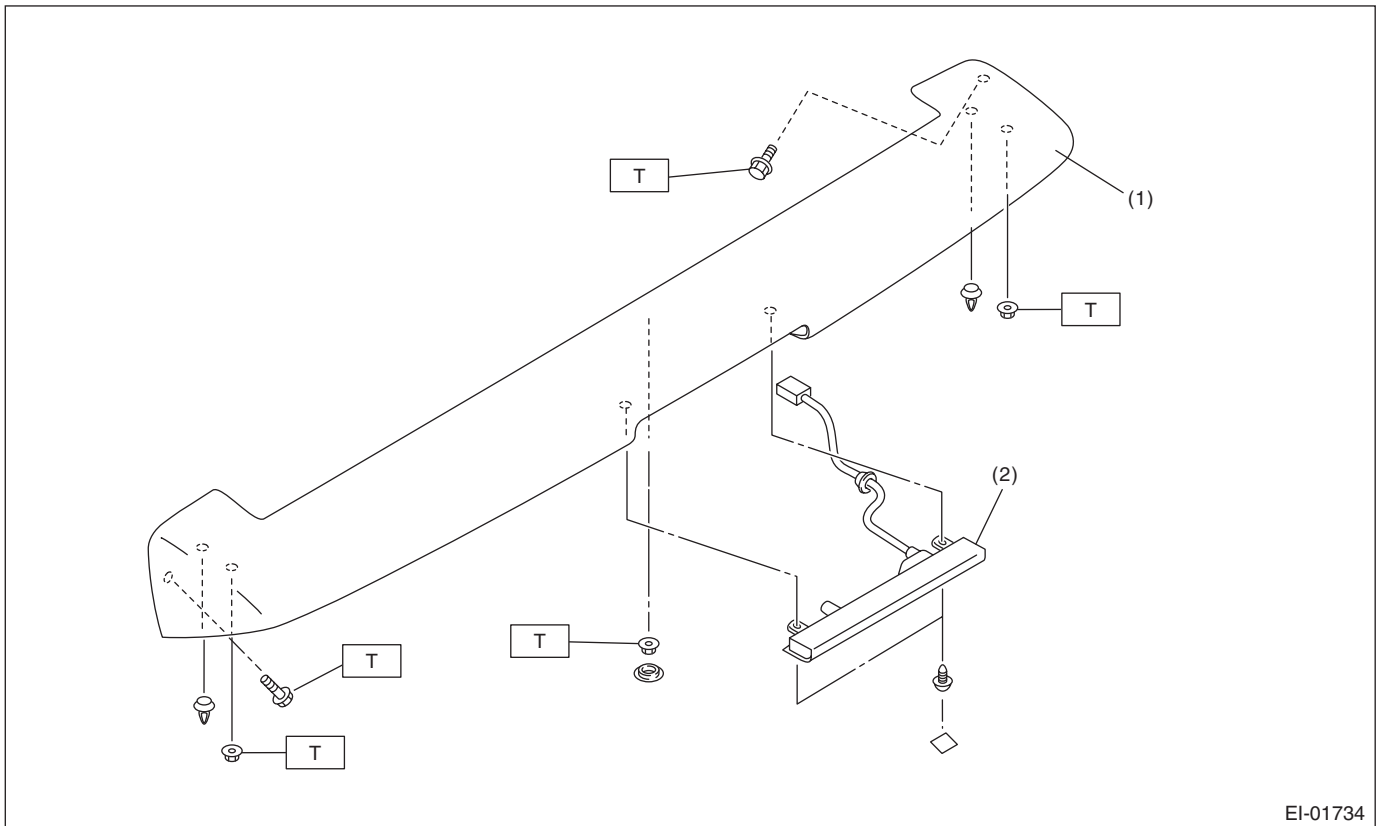


EI-01734

- (1) Roof spoiler
- (2) High-mounted stop light

Tightening torque: N·m (kgf-m, ft-lb)
T: 4.5 (0.46, 3.32)

8. ROOF MOLDING

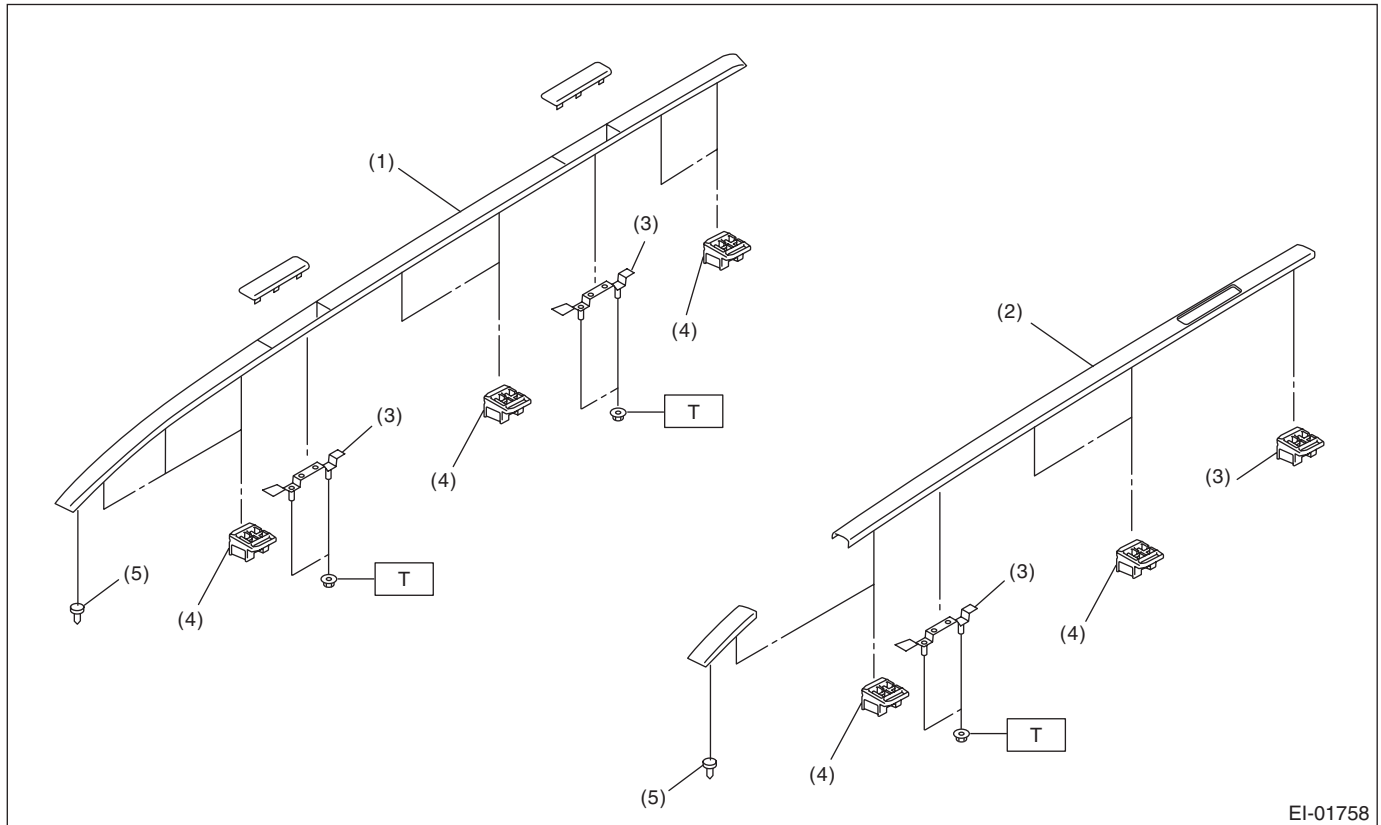

EI-01758


- | | |
|-----------------------------------|-----------|
| (1) Roof molding | (4) Clip |
| (2) Roof molding (with roof rail) | (5) Rivet |
| (3) Roof carrier attachment | |

Tightening torque: N·m (kgf-m, ft-lb)
T: 10 (1.0, 7.23)

General Description

EXTERIOR/INTERIOR TRIM


9. ROOF RAIL

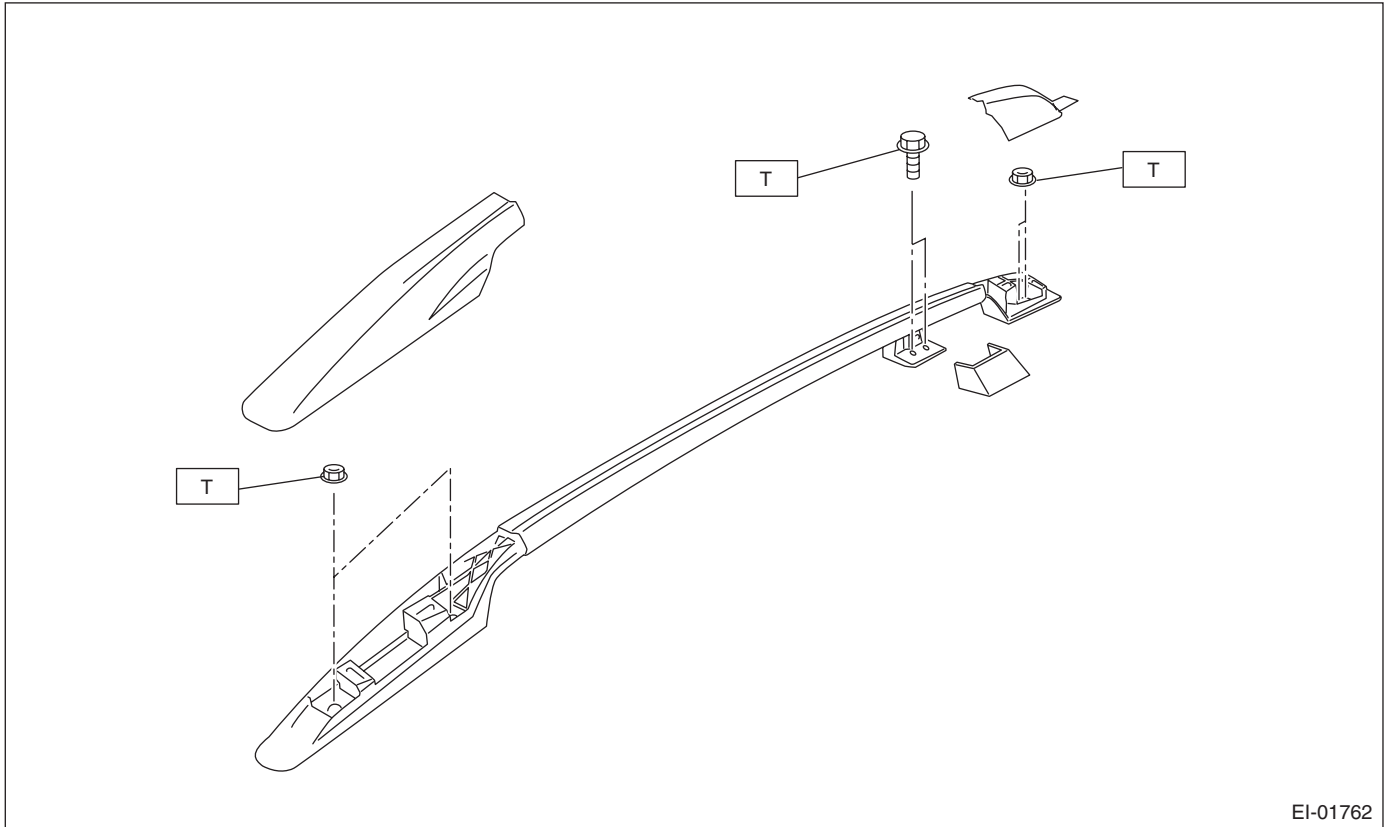

Tightening torque: N·m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.4)

10.SIDE GARNISH

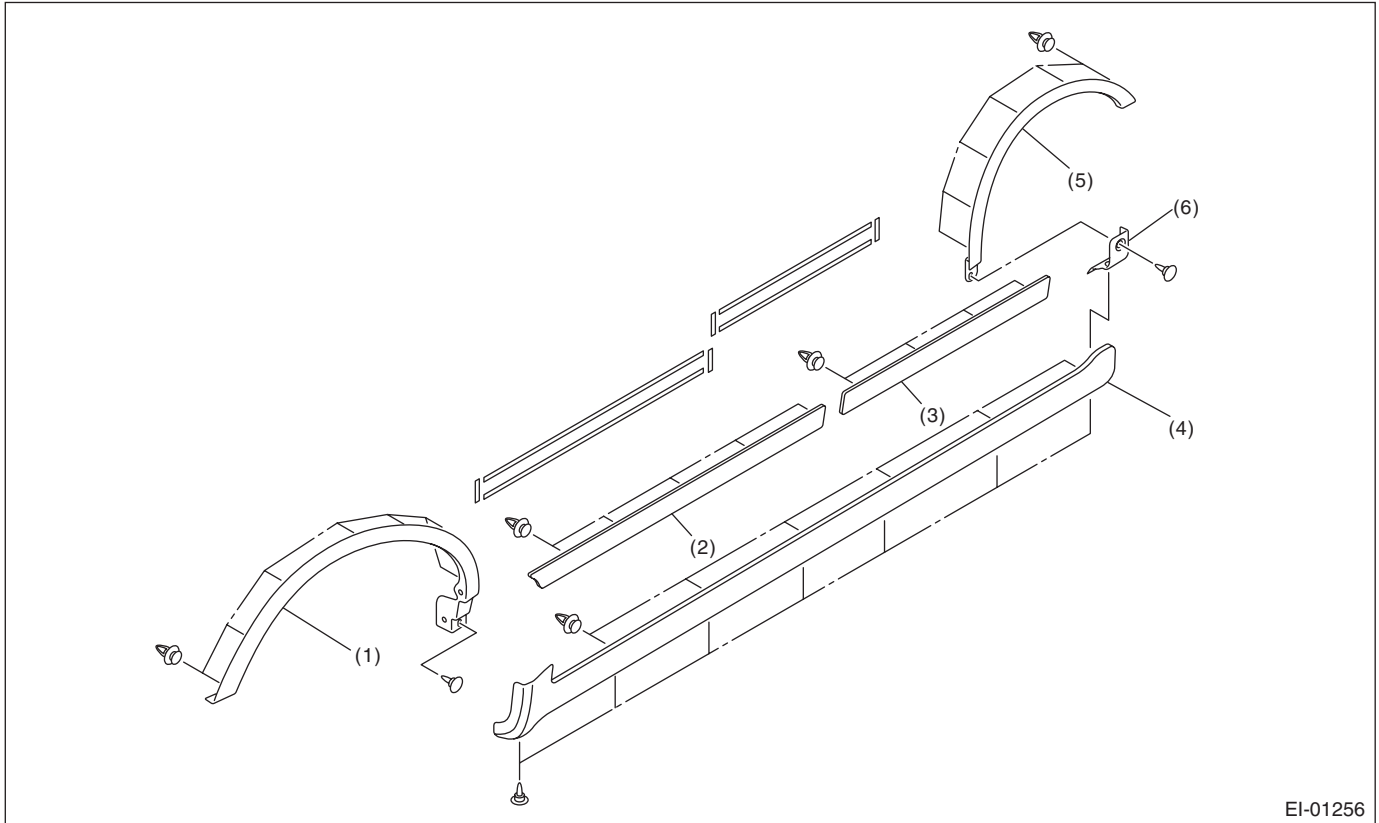

EI-01256

(1) Front fender garnish
(2) Front door garnish


(3) Rear door garnish
(4) Side sill garnish

(5) Rear quarter garnish
(6) Garnish end cover

General Description

EXTERIOR/INTERIOR TRIM


11.DOOR TRIM

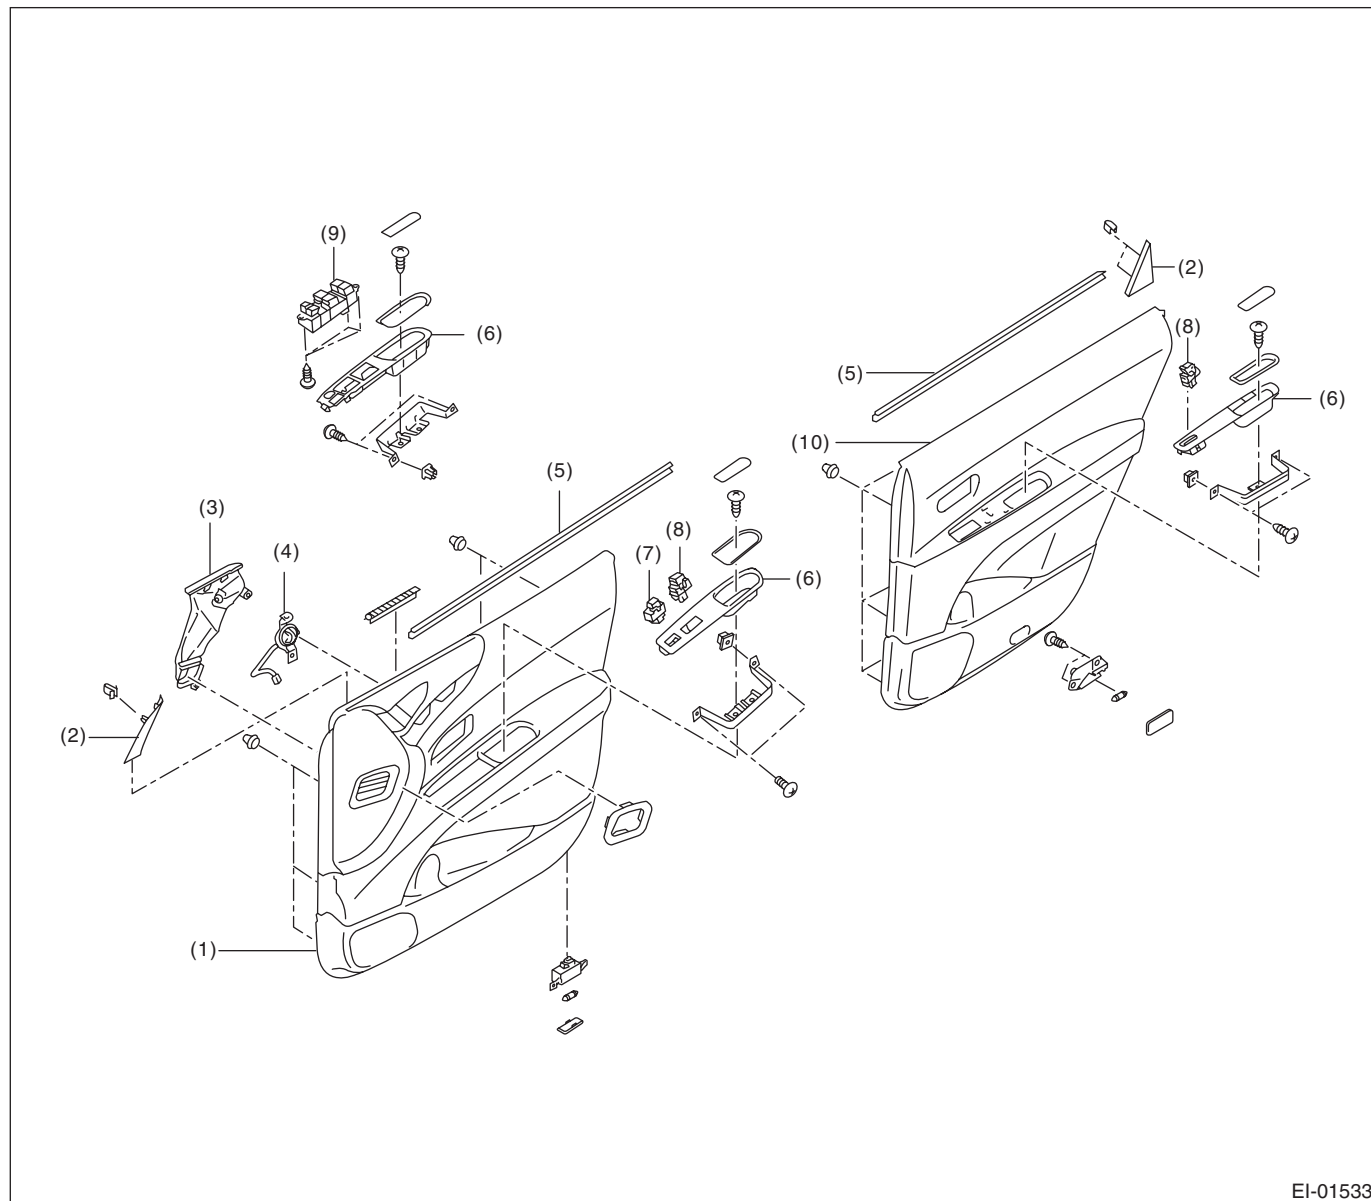

EI-01533

- | | | |
|---------------------|-------------------------------|-----------------------------------|
| (1) Front door trim | (5) Weather strip | (9) Power window main switch ASSY |
| (2) Gusset cover | (6) Power window switch cover | (10) Rear door trim |
| (3) Defroster duct | (7) Door lock switch | |
| (4) Tweeter | (8) Power window sub-switch | |

12.CONSOLE BOX

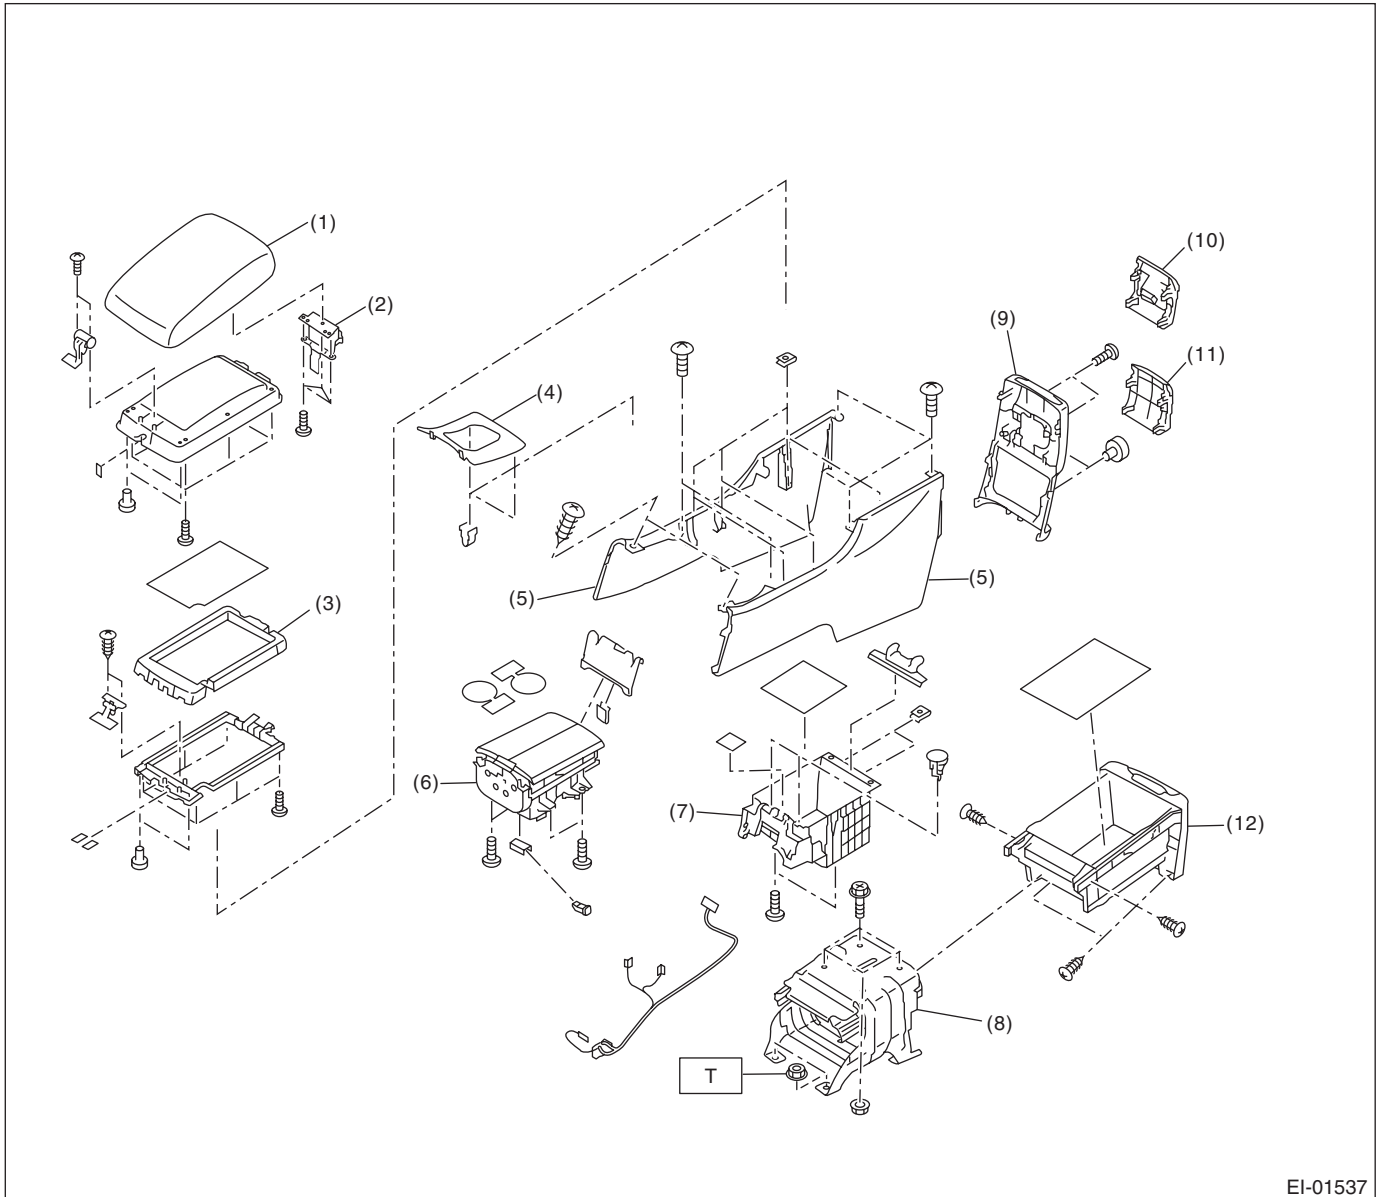

EI-01537

- | | | |
|-------------------------|--|---------------------------|
| (1) Console upper lid | (6) Cup holder ASSY | (11) Rear panel cover |
| (2) Lid hinge | (7) Console pocket | (12) Console lower pocket |
| (3) Console lower lid | (8) Console frame | |
| (4) Console front panel | (9) Console rear panel | |
| (5) Console side panel | (10) Rear panel cover (with rear cooler) | |


Tightening torque: N·m (kgf-m, ft-lb)

T: 6.5 (0.66, 4.79)

General Description


EXTERIOR/INTERIOR TRIM

13.INSTRUMENT PANEL

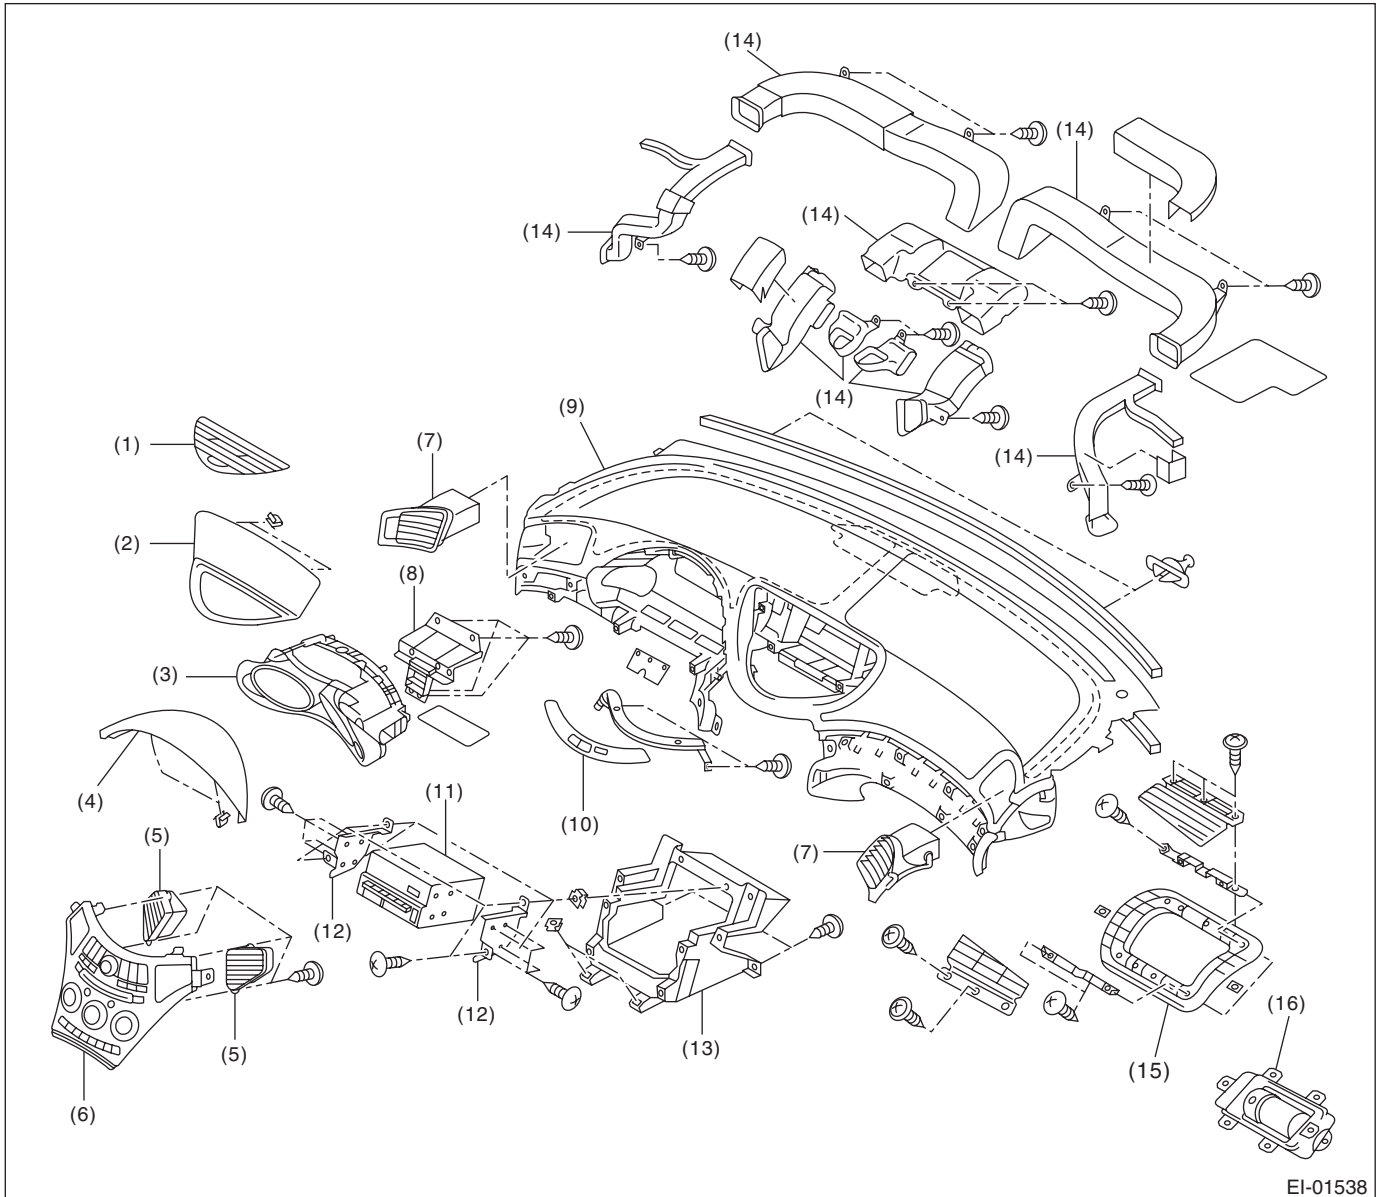

EI-01538

- | | | |
|----------------------------|---------------------------------|-------------------------------------|
| (1) Air vent upper grille | (7) Air vent side grille | (13) Center console frame |
| (2) Display cover | (8) Meter stay | (14) Air vent duct |
| (3) Combination meter ASSY | (9) Instrument panel upper ASSY | (15) Passenger's airbag stay |
| (4) Meter visor | (10) Upper control switch | (16) Passenger's airbag module ASSY |
| (5) Air vent center grille | (11) Audio ASSY | |
| (6) Control panel | (12) Audio bracket | |

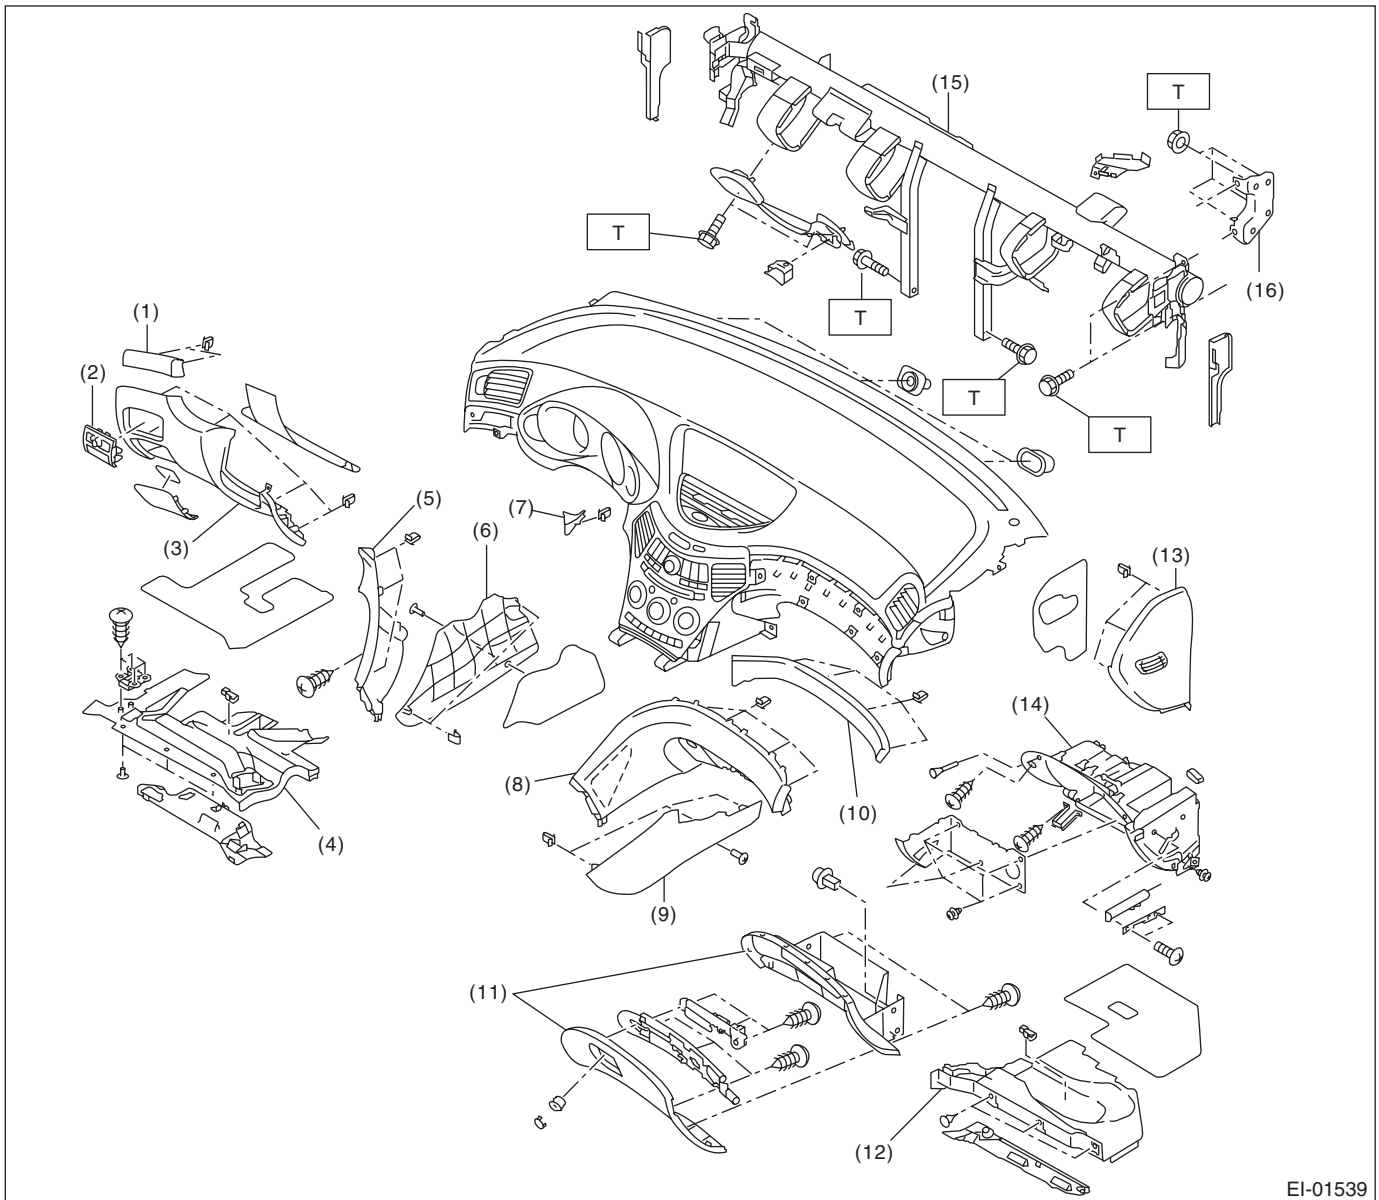

EI-01539

- | | | |
|--|----------------------------------|------------------------------------|
| (1) Garnish LH | (8) Console side panel upper RH | (15) Steering support beam ASSY |
| (2) Switch ASSY | (9) Console side panel lower RH | (16) Steering support beam bracket |
| (3) Instrument panel lower cover upper | (10) Garnish RH | |
| (4) Instrument panel lower cover under | (11) Glove box lid | |
| (5) Console side panel upper LH | (12) Glove box lower cover | |
| (6) Console side panel lower LH | (13) Instrument panel side cover | |
| (7) Garnish CTR | (14) Glove box panel | |


Tightening torque: N·m (kgf-m, ft-lb)

T: 25 (25.5, 18)

General Description

EXTERIOR/INTERIOR TRIM

14.SIDE TRIM

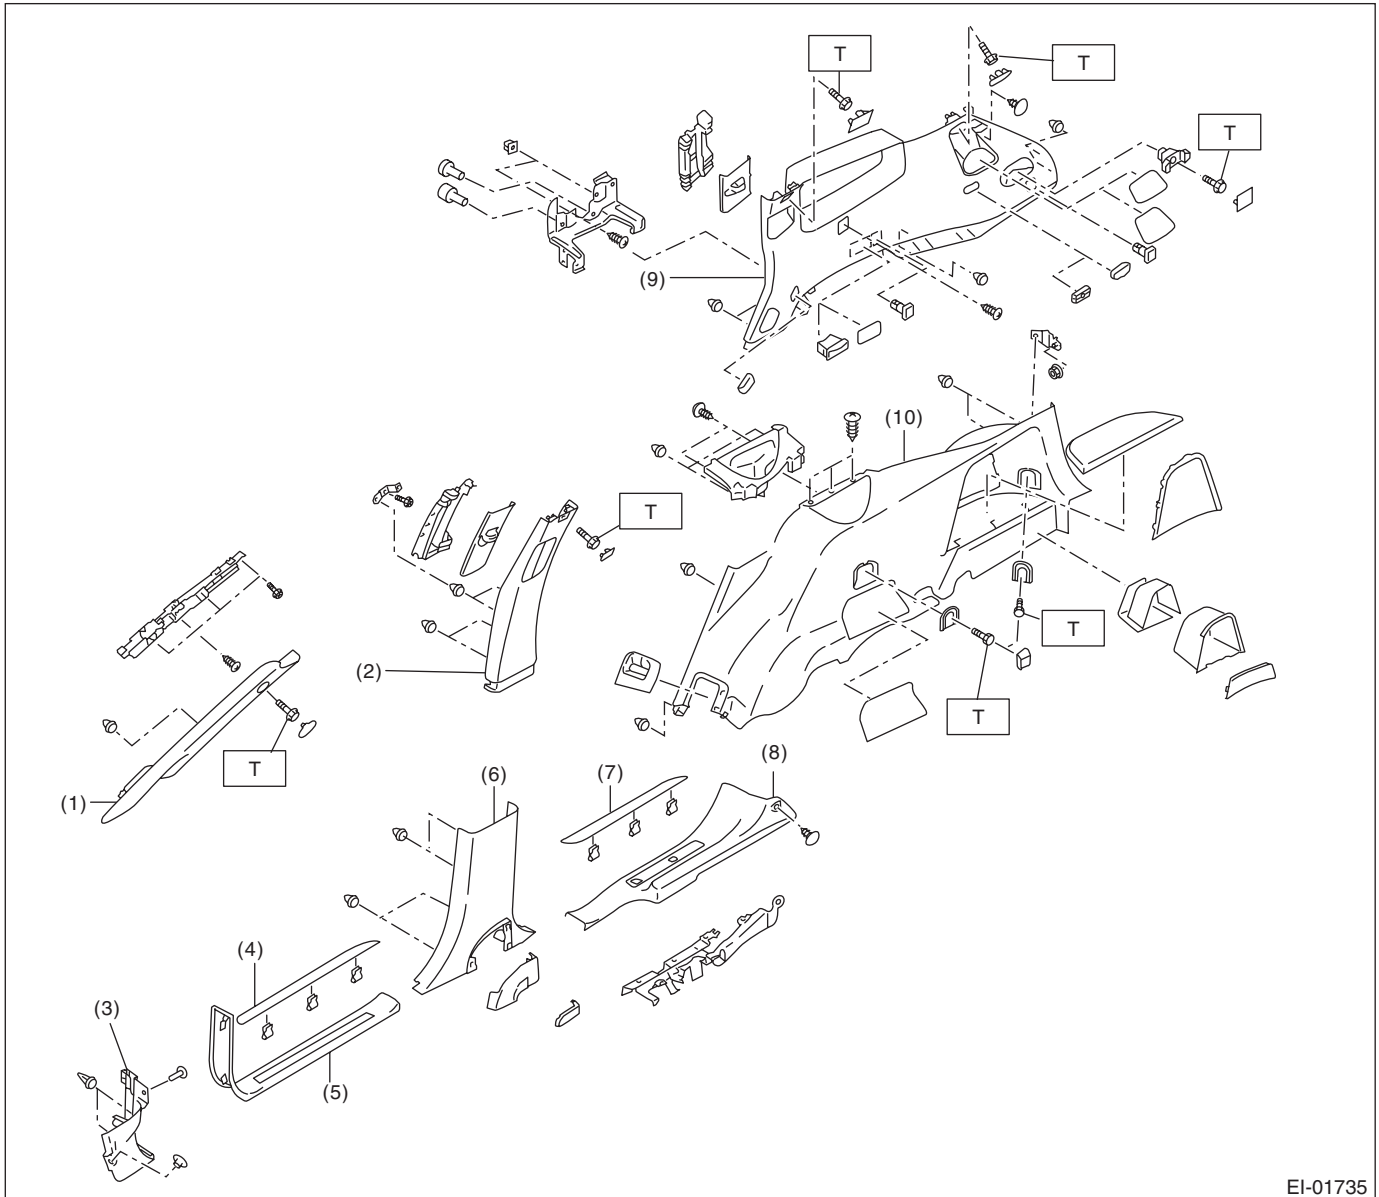


EI-01735

- | | |
|------------------------------|------------------------------|
| (1) Front pillar upper trim | (6) Center pillar lower trim |
| (2) Center pillar upper trim | (7) Rear scuff plate |
| (3) Front pillar lower trim | (8) Rear door scuff plate |
| (4) Front scuff plate | (9) Rear quarter upper trim |
| (5) Front door scuff plate | (10) Rear quarter lower trim |

Tightening torque: N·m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.4)

15.REAR GATE TRIM

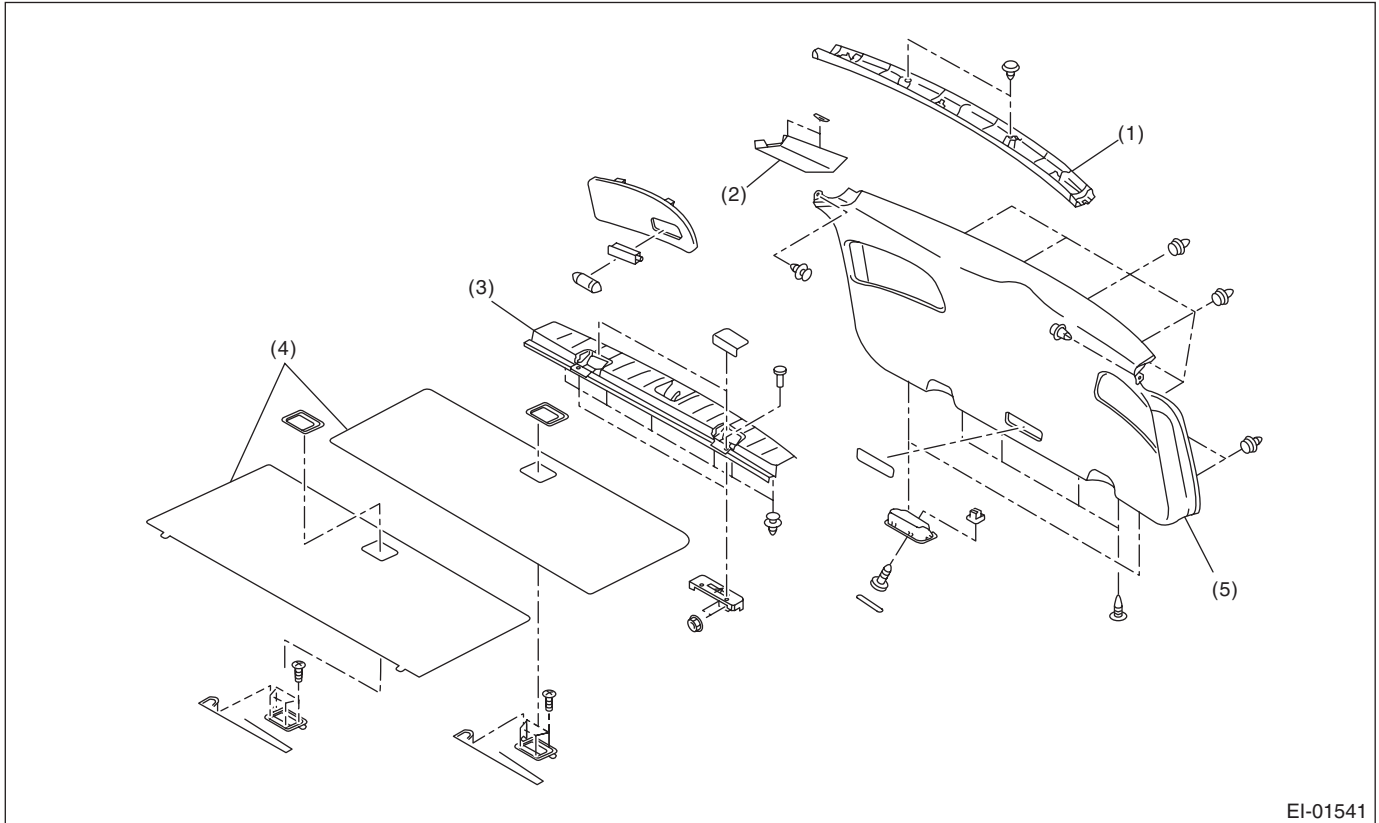


EI-01541

- | | | |
|---------------------------------|-----------------------------|--------------------------------|
| (1) Rear gate panel upper trim | (3) Luggage floor end cover | (5) Rear gate panel lower trim |
| (2) Rear gate panel pillar trim | (4) Luggage floor mat | |

General Description

EXTERIOR/INTERIOR TRIM

16.ROOF TRIM

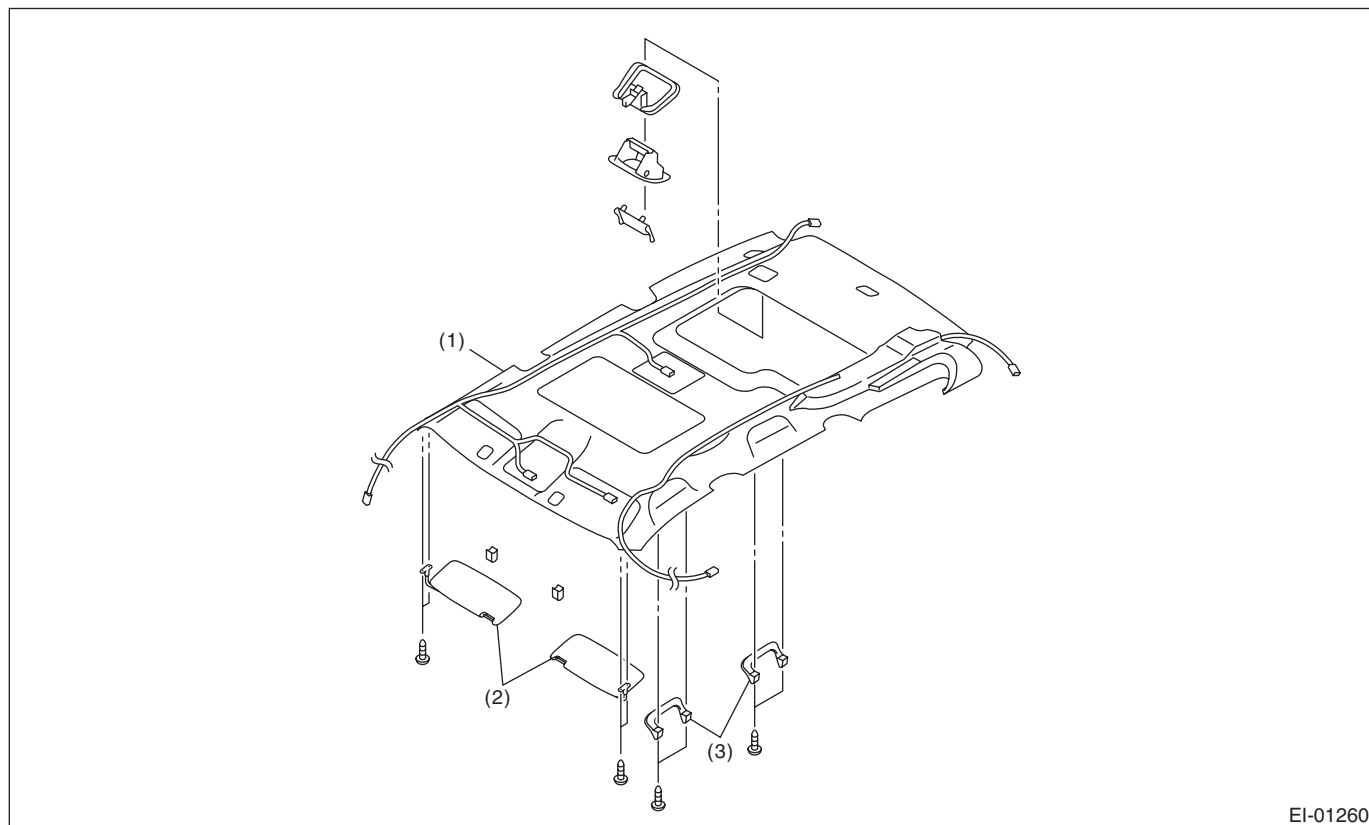


(1) Roof trim

(2) Sun visor

(3) Assist rail

17.HEAT SHIELD COVER

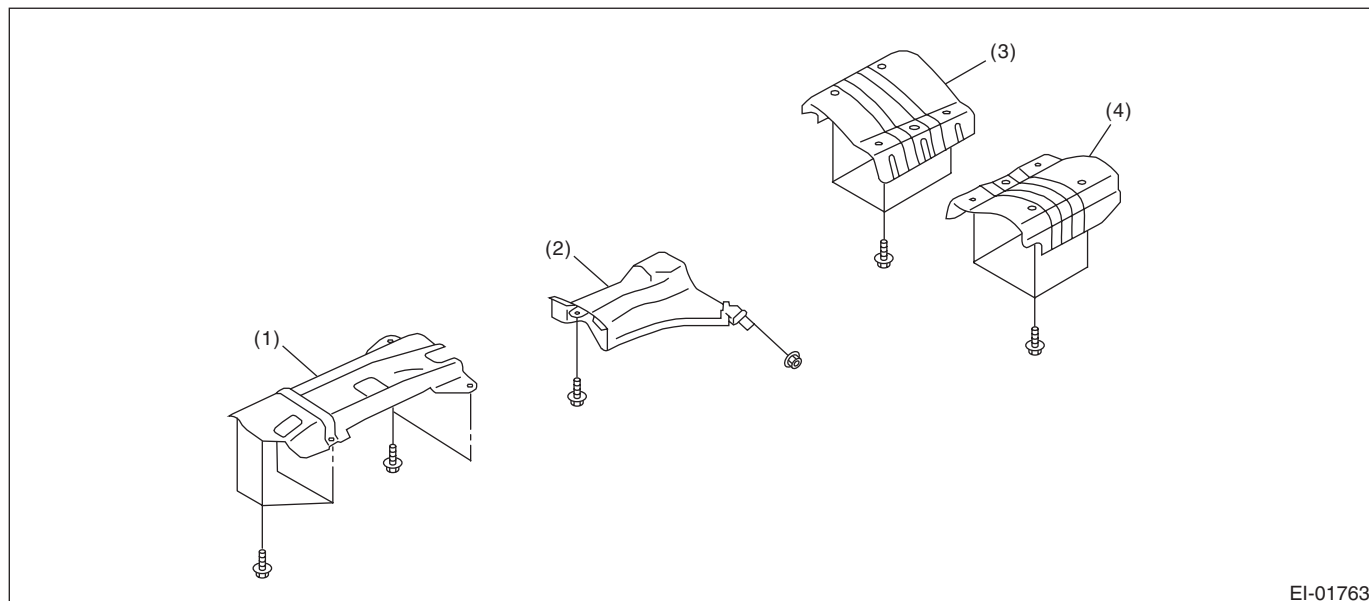


(1) Front heat shield cover

(2) Center heat shield cover

(3) Rear heat shield cover RH

(4) Rear heat shield cover LH

18.TRAILER HITCH

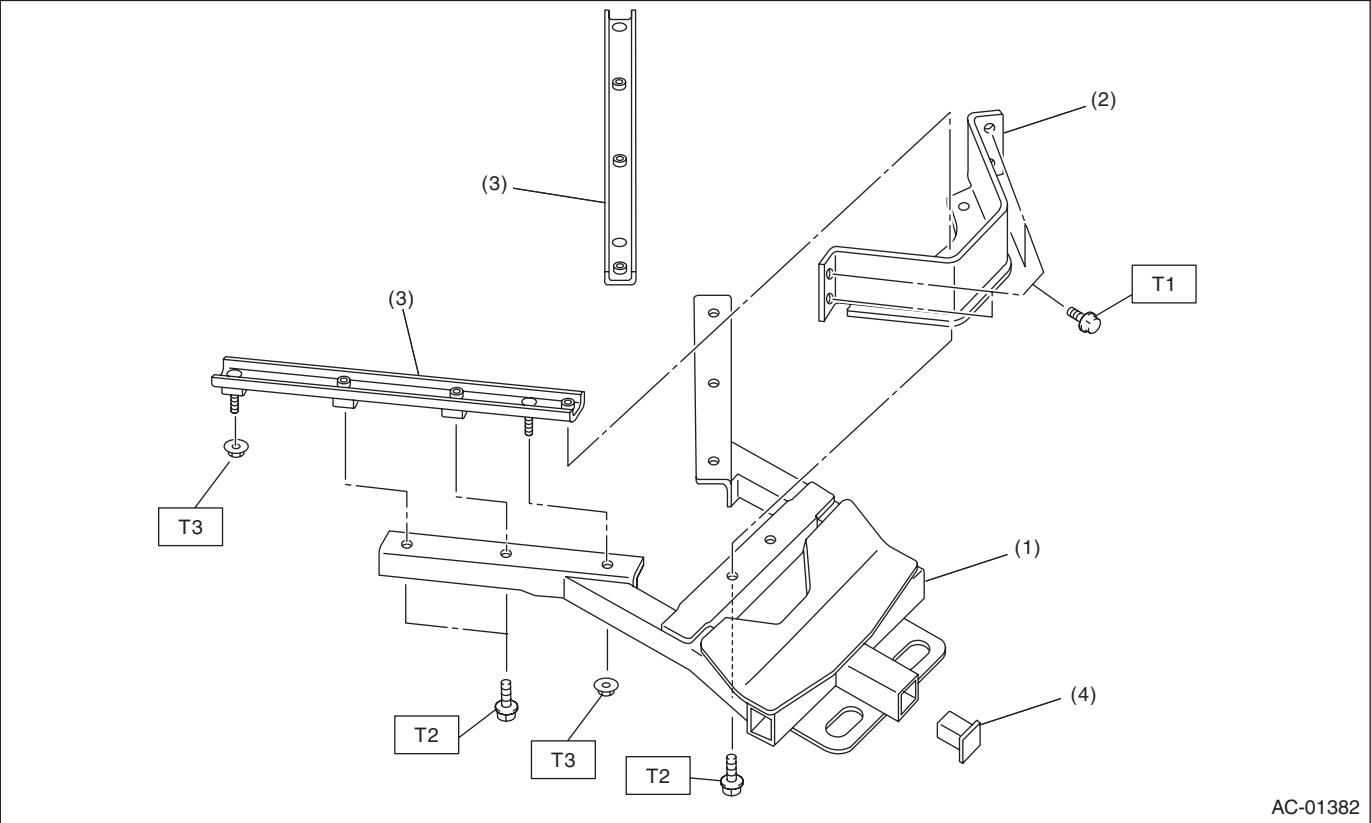

- (1)

Main frame
- (2)

Center frame
- (3)

Side frame
- (4)

Cover

Tightening torque:N·m (kgf-m, ft-lb)
T1: 13 (1.33, 9.4)
T2: 33 (3.37, 23.9)
T3: 53 (5.4 38.3)

B: PREPARATION TOOL

TOOL NAME	REMARKS
Clip remover	Used for removing trim.
Clip clamp pliers	Used for removal of various clips and clamps.